


START/STOP


ARM

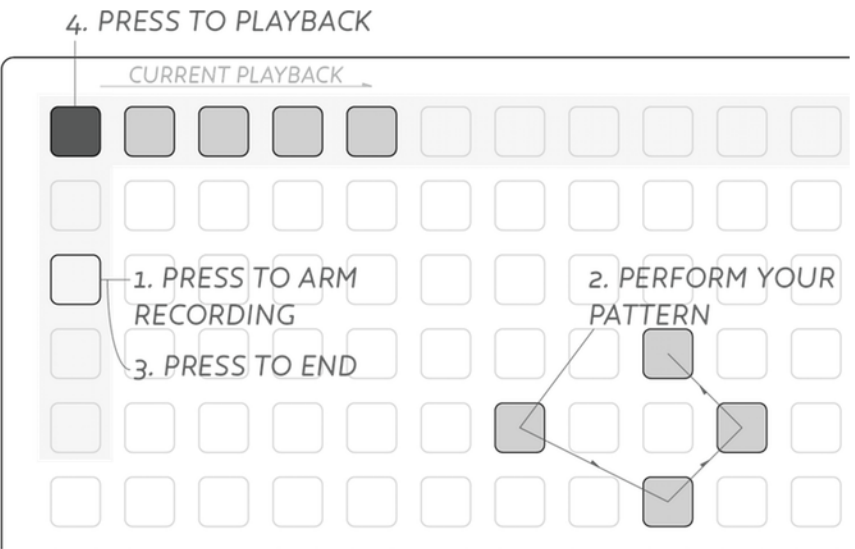


AUTO-LOOP RECORDING

START/STOP

ARM
LOOP

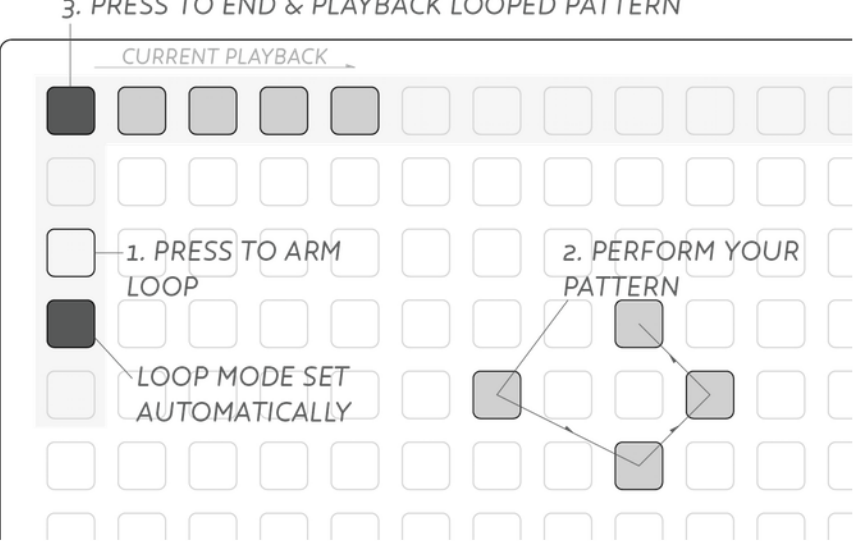




The far left grid column is reserved for special functions.

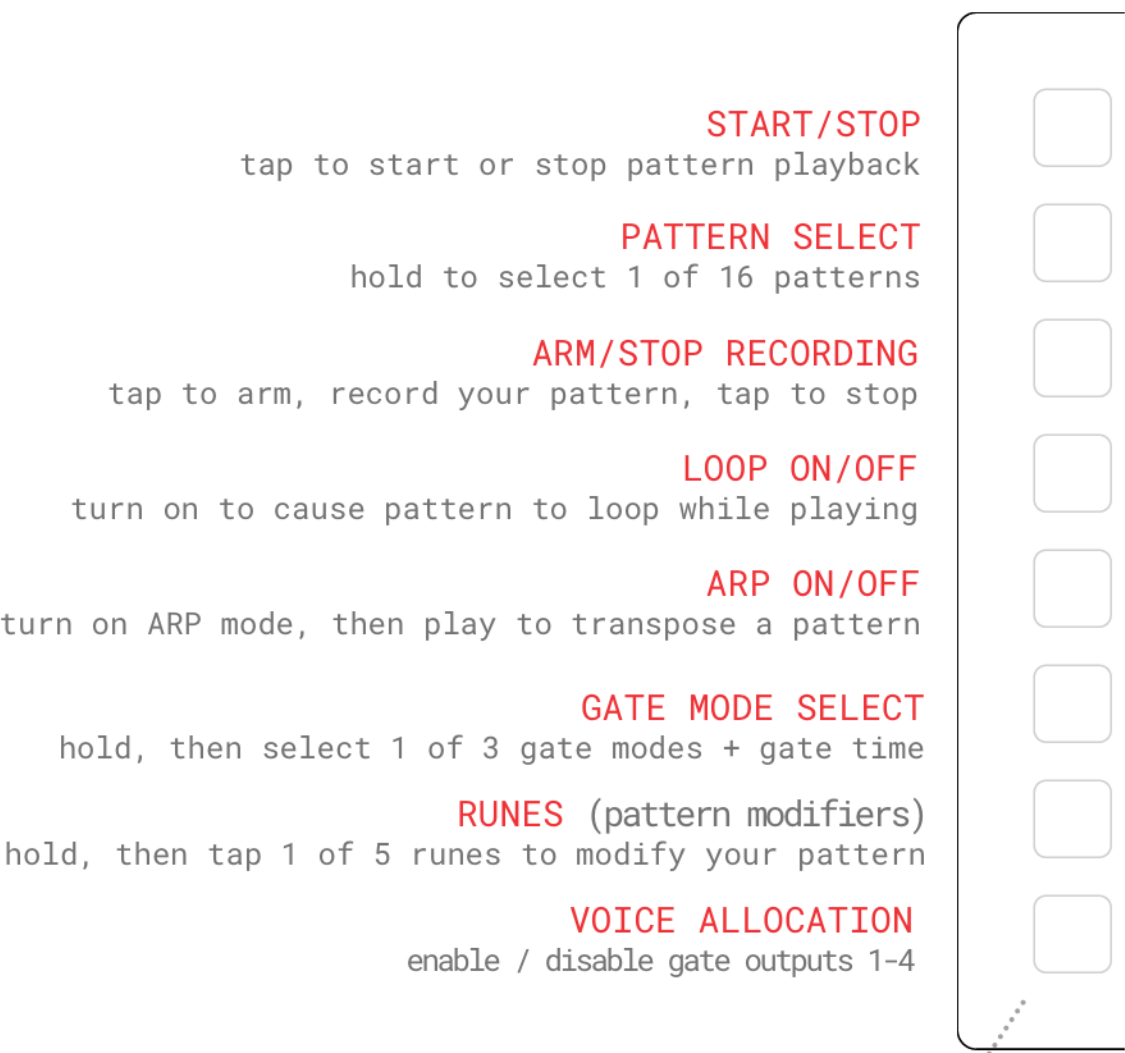

PLAYBACK POSITION

The current pattern playback position is shown in the top row. The overall performance time of the pattern is represented by the row, with each step representing 1/16th of the total time.

There are 16 patterns (per PRESET). Each pattern can include up to 64 notes, with no time limit. Choose a pattern by holding PATTERN SELECT, then tapping a pattern in the 4x4 grid. The current pattern is shown bright. Stored patterns (with recorded events) show mid brightness. Empty patterns show dim. Hold PATTERN SELECT then tap START/STOP to lock the pattern selection grid. You can then use the 4x4 grid to quickly jump between patterns. TIP - you can also invoke runes while in PATTERN SELECT mode. See RUNES. TIP - record patterns in the middle of the grid so they can be transposed in all directions.

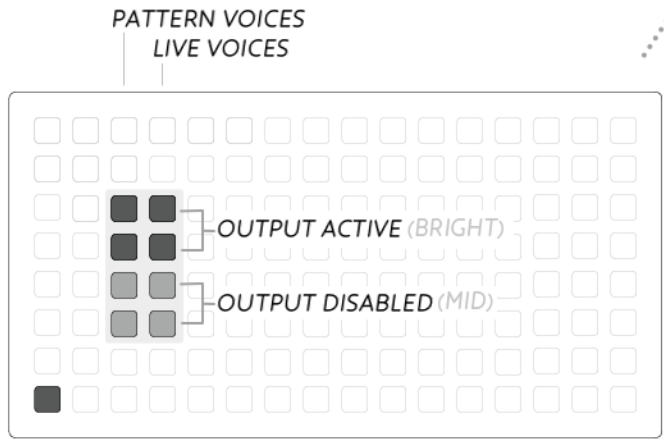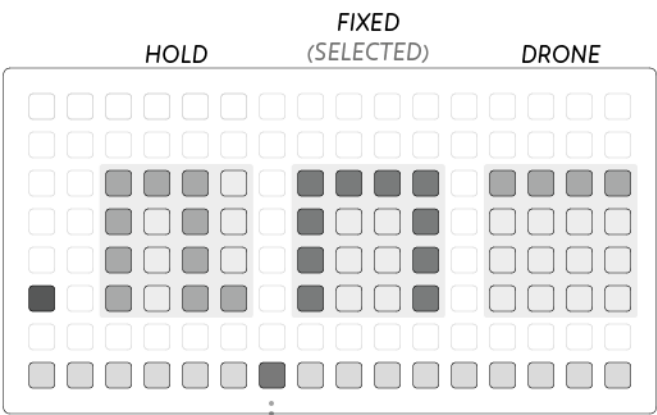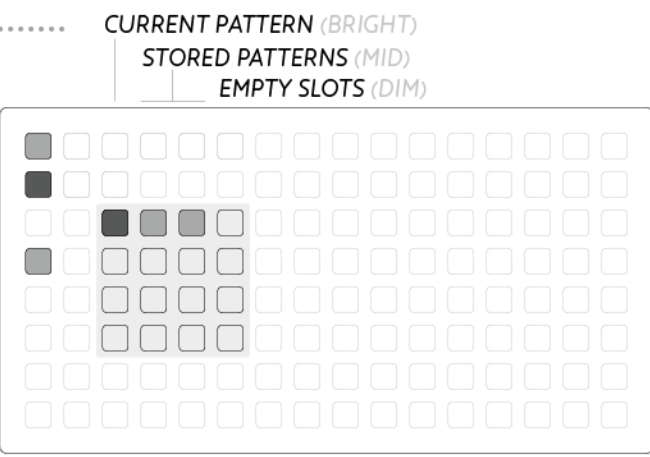

The left column represents voices used by the recorded pattern. The right column represents voices used when playing live.