


# Launchpad (X, Pro, Mini MK3)

navigate to PARAMS > MIDI note / OP-2 setup

- enable MIDI control
- choose Launchpad
- disable MIDI echo
- multi channel
- a = 1
- b = 2
- c = 3
- midi base = 60
- no midi zilchmo

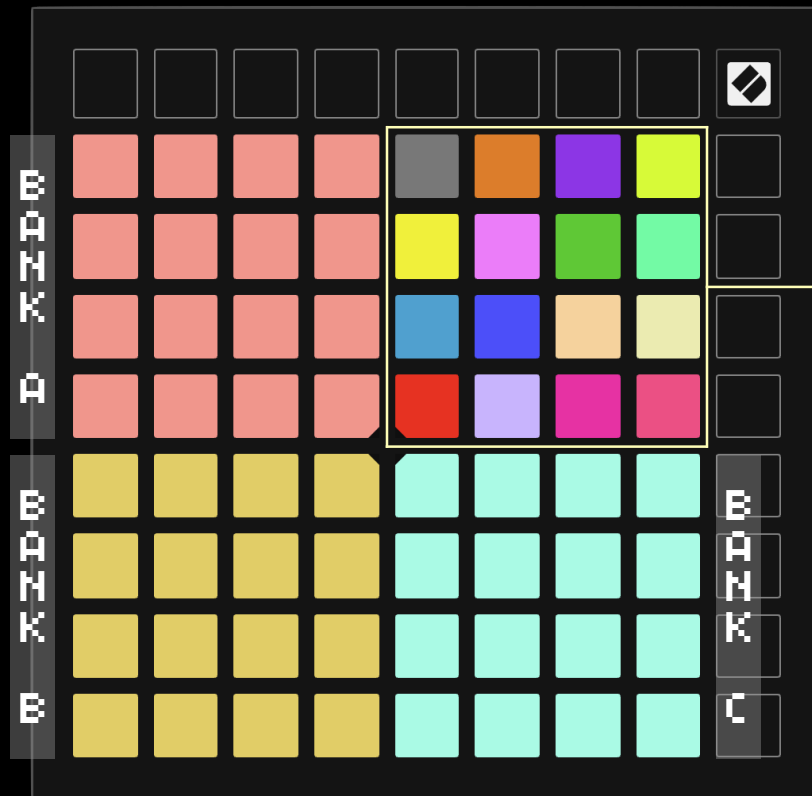

MIDI cc's for  
mappable control  
(here are your  
zilchmos)